

# ROLLER BLINDS

installation manual



## INSTALLATION PACK CONTENTS

Your Roller blinds will be supplied with a sufficient number of fixing brackets to complete the installation. All of them should be used.



**A**

wall plug




**B**

fixing screw



**C**

top fixing bracket

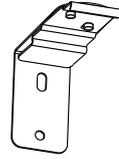

**D**

side fixing bracket




**E**

drill bit


## REMOTE CONTROL KIT PARTS

**F**

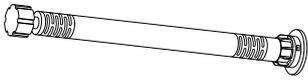

electric motor

**G**

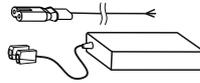


motor transformer  
+cables

**H**



 3 pin plug

**I**




remote control

## RECOMMENDED TOOLBOX

For the blinds installation the following tools will be needed.



screw driver

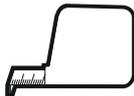


tape measure



pencil



drill


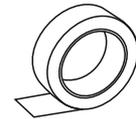


masking tape

# 1


## RECESS INSTALLATION

- Fix your end brackets 50mm to 75mm in from each end.
- The remaining brackets should be spaced evenly between them.
- Two fixing screws should be used for one bracket.
- When fitting inside the recess, make sure you will miss all obstacles, like handles etc.

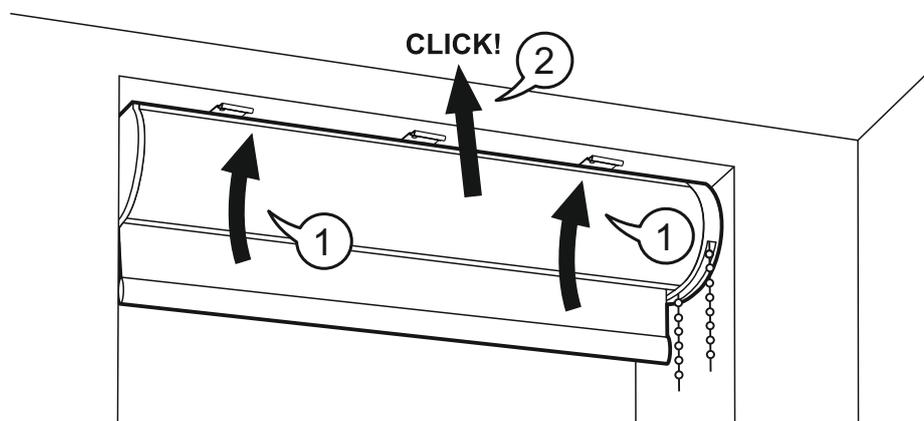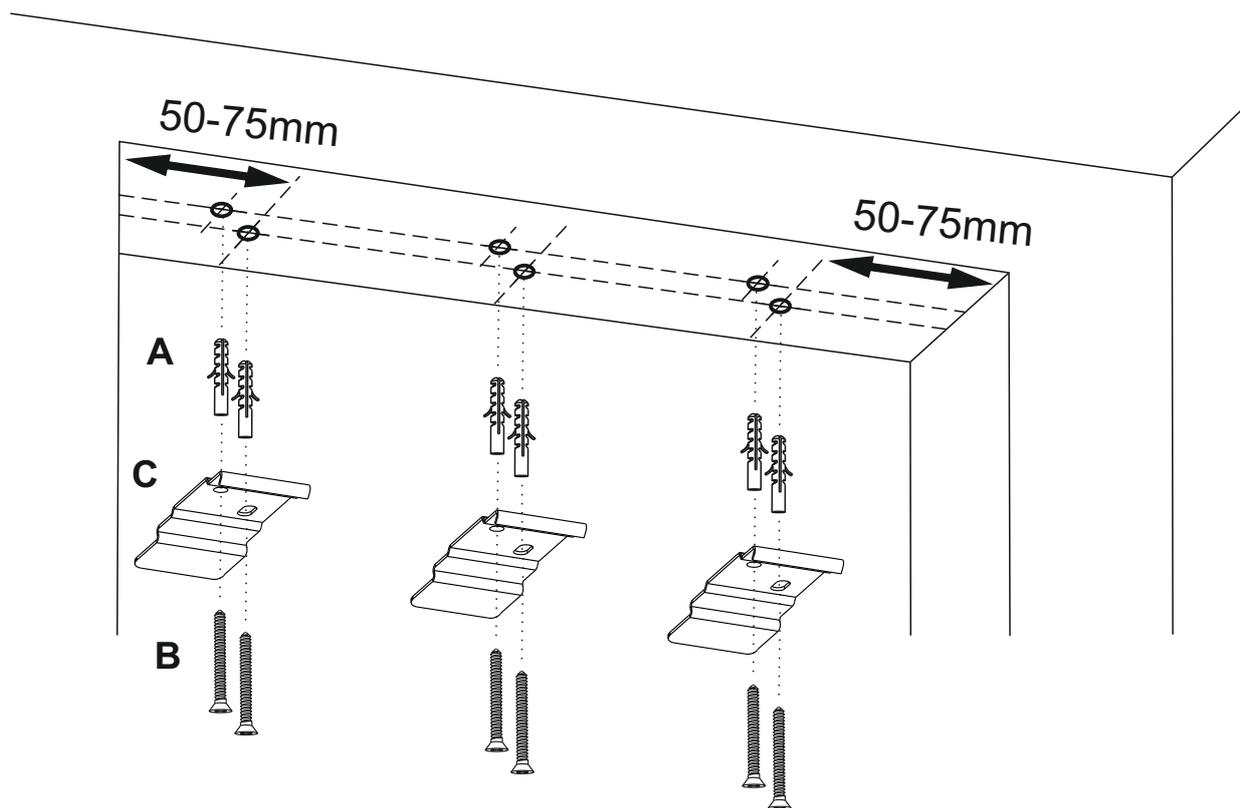


## 1.2 WALL INSTALLATION

- Place blind centrally, mark both ends and the bottom of the track.
- Fix your end brackets 50mm to 75mm in from each end.
- There are no spares we recommend you use all of the brackets supplied.
- The 84mm dimension is the measurement from the bottom of a track to the centre of the bigger hole of a bracket.

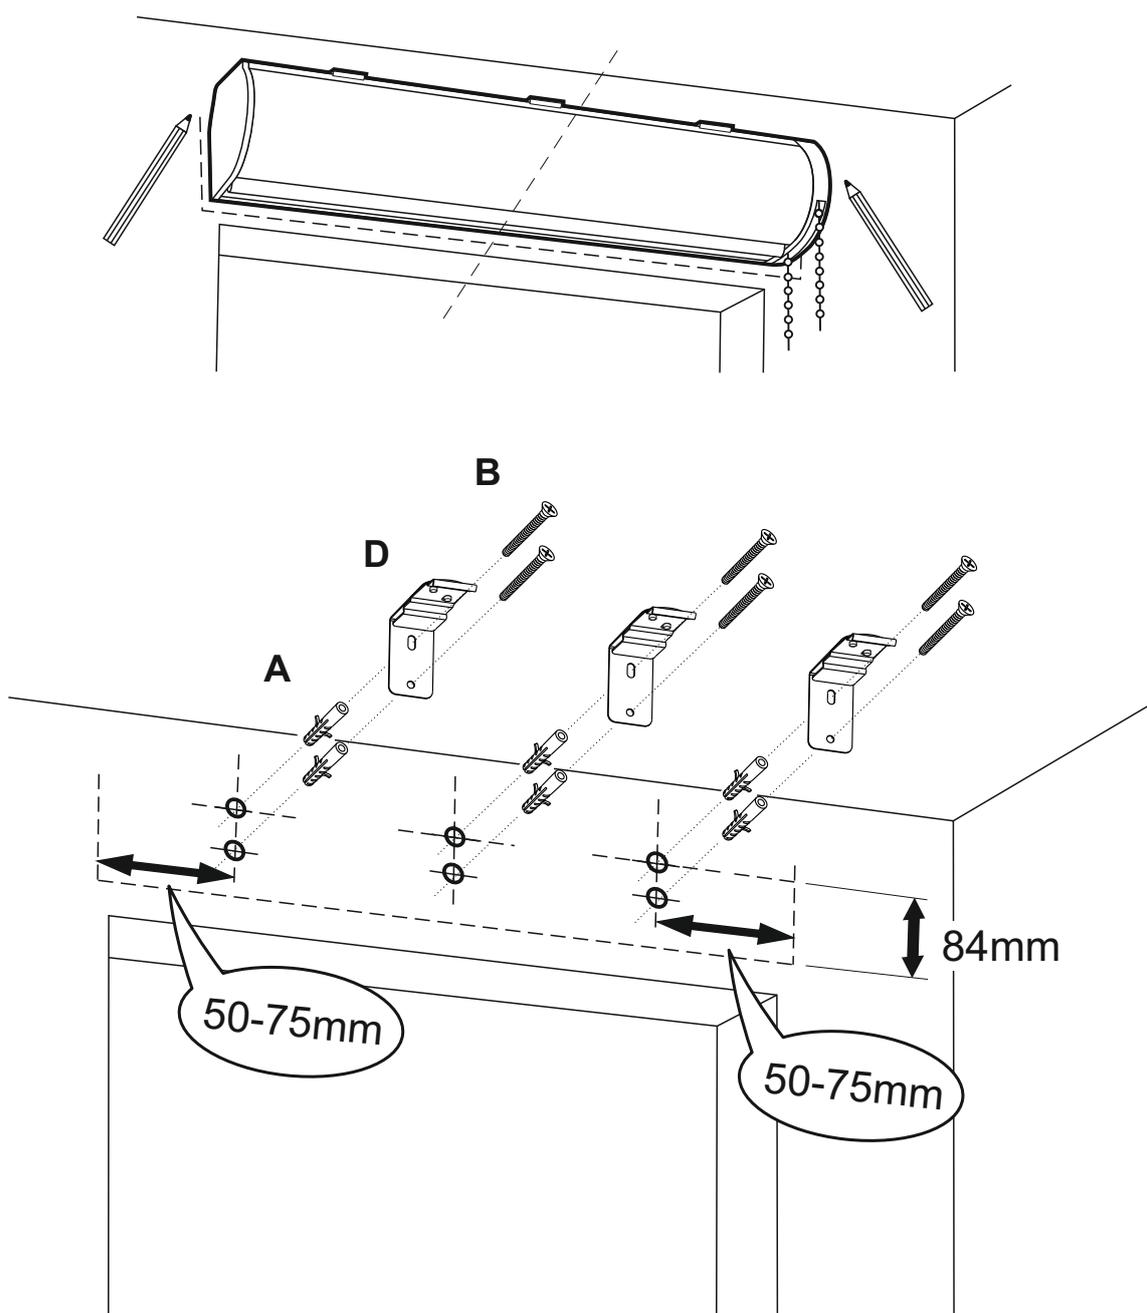


# 2

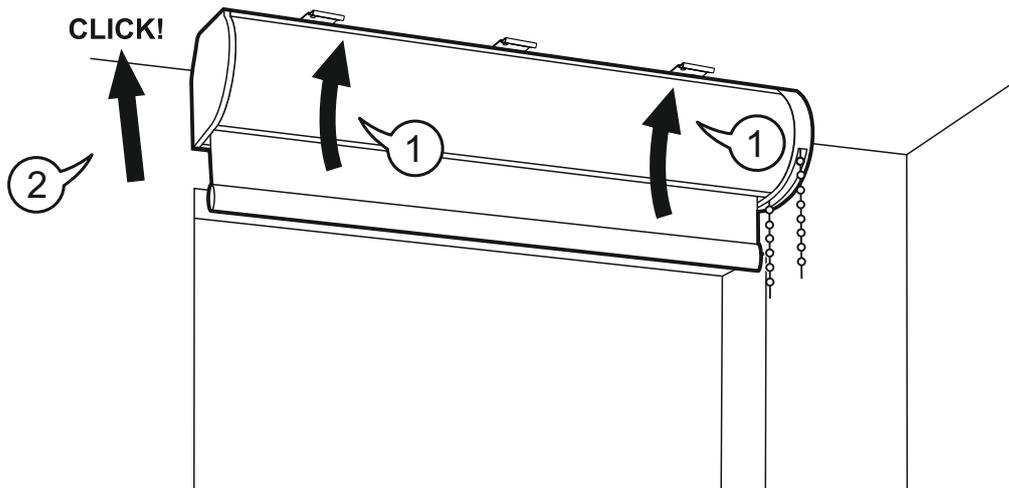

Hook blind into the position on front first and then snap the back of the blind. Check to make sure the blinds is security fixed and working correctly.


Opening the cassette

## REMOTE CONTROL INSTALLATION

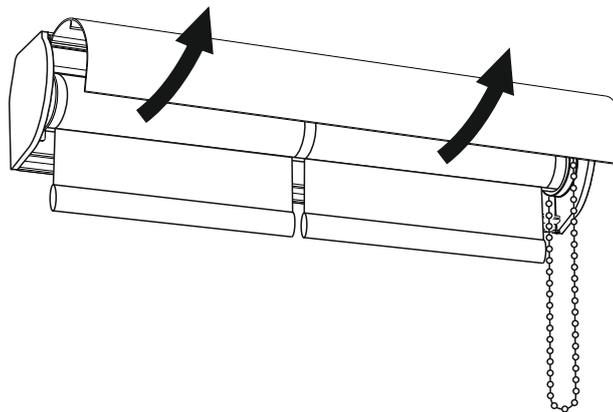


Take the front cover off.

### Centering the gaps

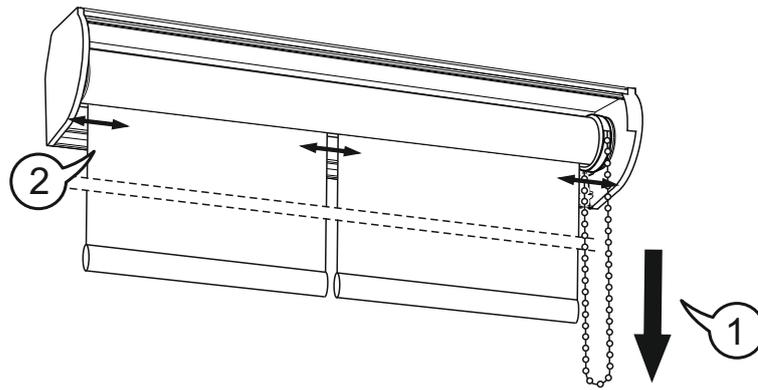


Move the blinds all the way down until you see the aluminium roller tube and adjust gaps if necessary.

### Levelling the ends

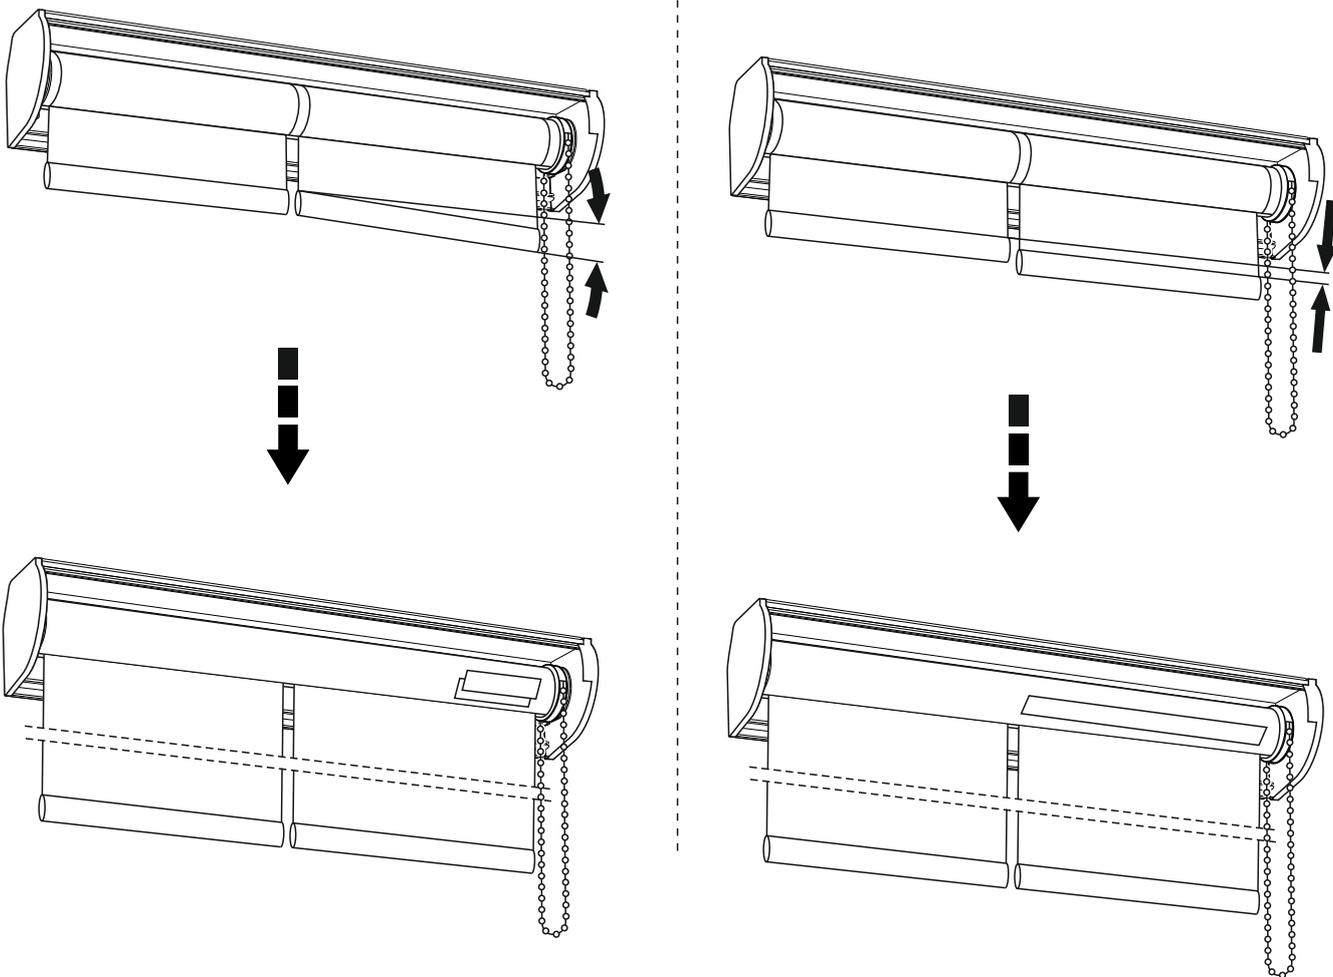


Check the angle and level of the bottom bars of blinds in opened (upper) position. Use masking tape on the aluminium roller tube if they are not levelled correctly. Keep adding or taking off until the bottom bars are perfectly level.


**Inserting the motor**

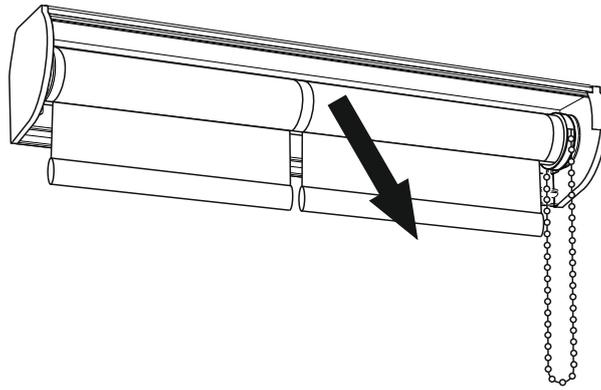

Make sure you have clean hands. Take the tube out of the brackets.

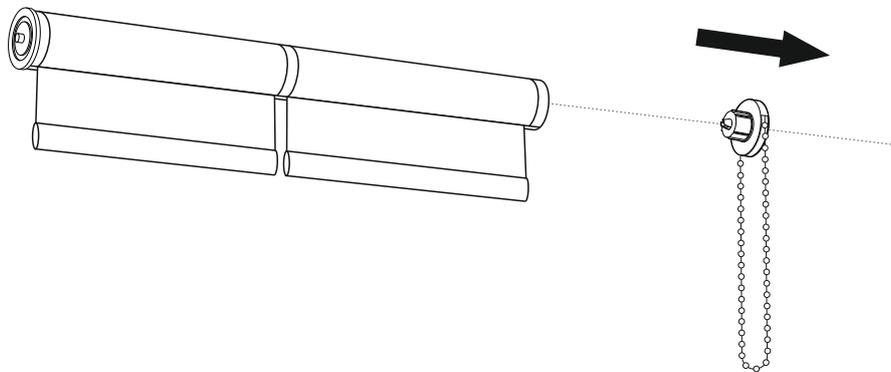


Remove the manual chain operator.

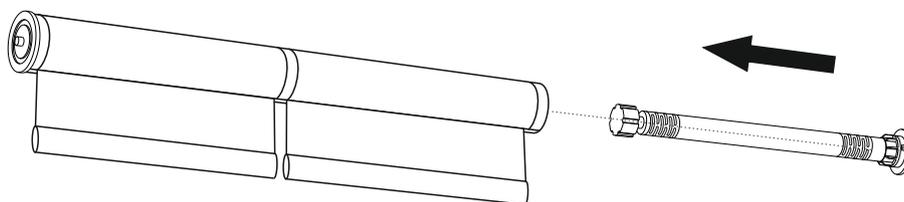


Insert electric motor in to the tube and place it back in to the cassette.  
While inserting, plug the wire in to the motor, please see next page.

### Connecting the motor

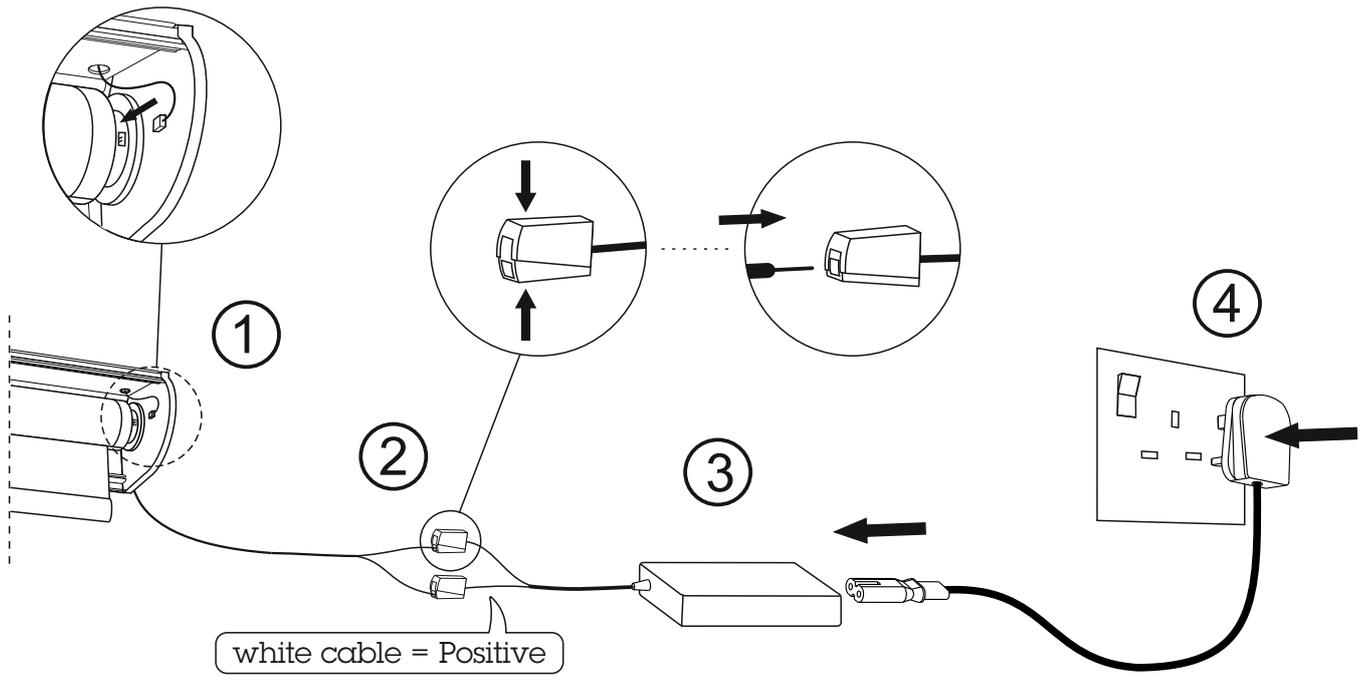

Connect the electric motor to the transformer and then to the wall plug.  
Setup the remote controller.

### Closing the cassette

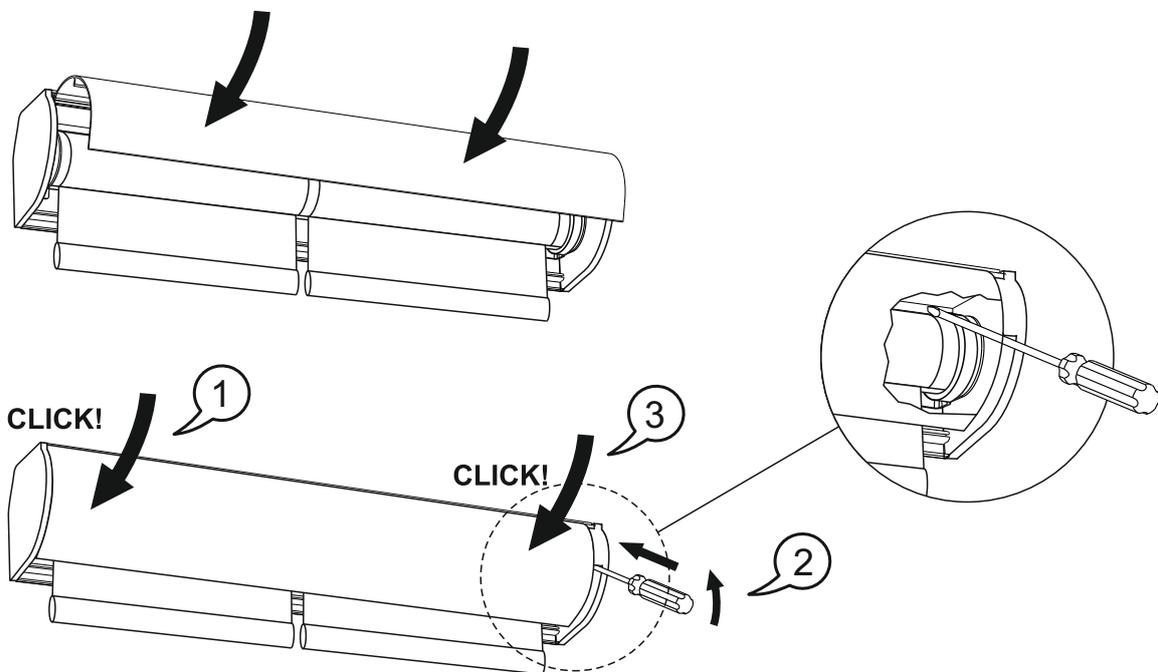


When fixing front cover back please use screwdriver as shown to assist with the fitting and also to avoid any damage that may occur to the end cap.

# Remote Controller Setup


## TO DELETE ALL PREVIOUS SETTINGS

Using a paperclip or pen, press and hold the program button, located on the motor head for 12 seconds. All transmitters and limits are now erased and will have to be reset.

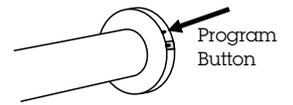


### step 1

To initiate programming press and hold both the **UP** (▲) and **DOWN** (▼) buttons at the same time until the shade jogs. When setting the multi-channel controller make sure you selected the correct channel first.

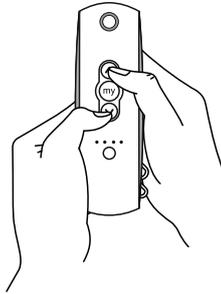


### step 2

Check the direction of operation. Press and hold the **DOWN** (▼) button and confirm the shade moves in a down direction (shade will operate only when button is held). To change the direction press and hold the **MY** (my) (STOP) button until the shade jogs.

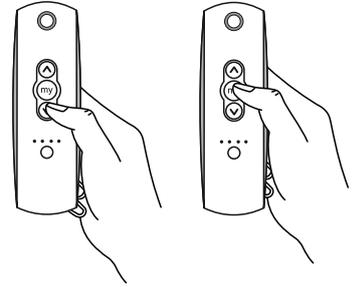


### step 3

Bring the shade to your desired lower limit. Press and hold both the **MY** (my) (Stop) and **UP** (▲) buttons until the shade begins to move up, then release. Stop the shade where the upper limit should be set, you can adjust by pressing the **UP** (▲) or **DOWN** (▼) buttons.

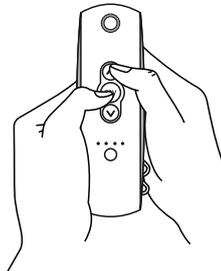


### step 4

Bring the shade to your desired upper limit. Press and hold both the **MY** (my) (Stop) and **DOWN** (▼) buttons until the shade begins to move down, then release. Stop the shade where the lower limit should be set, you can adjust by pressing the **UP** (▲) or **DOWN** (▼) buttons.

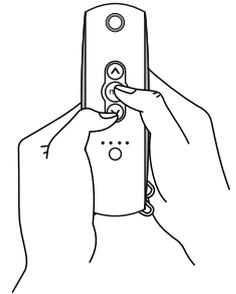


### step 5

Press and hold the **MY** (my) button until the shade jogs to confirm the limit setting.

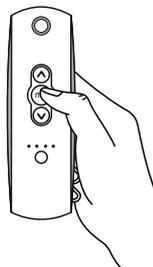

### step 6

Press and hold the program button on the back of the transmitter until the shade jogs. (Shade is now programmed and once operated will travel to its end limits.)

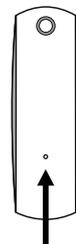


Programming Button

NOTE: Steps 3 and 4 may be reversed depending on initial position of shade.

## TO ADJUST LIMITS

**To change the lower limit:** Move the shade to its current lower limit position and let it stop. Press the **UP** (▲) and **DOWN** (▼) buttons simultaneously until the shade jogs, then release. Adjust to a new lower limit position. Press **MY** (my) button until the shade jogs, then release. Check new limit.

**To change the upper limit:** Move the shade to its current lower limit position and let it stop. Press the **UP** (▲) and **DOWN** (▼) buttons simultaneously until the shade jogs, then release. Adjust to a new upper limit position. Press **MY** (my) button until the shade jogs, then release. Check new limit.

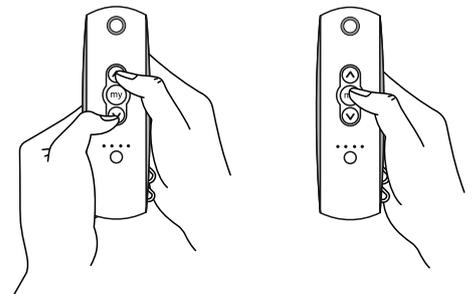

## TO ADD A REMOTE/CHANNEL - LINK PROGRAMS/MOTORS

First press the programming button on the back of the already programmed remote until the shade jogs. Then press the programming button on the new remote or channel that you would like to add until the shade jogs. Check it.





---

Origin Frames Ltd, Unit 3 & 4 Sunters End, Hillbottom Road  
High Wycombe, Buckinghamshire HP12 4HS United Kingdom.

**t** 0845 450 6662  
**f** 0845 450 6663  
**e** [info@origin-global.com](mailto:info@origin-global.com)  
**w** [origin-global.com](http://origin-global.com)